

NOTES:

- 1) SEALANT IS INSTALLED BEHIND THE FLEX FLASHING MEMBRANE AND AT THE TOP OF THE FLEX TERMINATION BAR
- 2) SEALANT IS A MAINTENANCE ITEM AND IS NOT COVERED UNDER FLEX WARRANTY
- 3) ALL FLASHING SHALL EXTEND A MIN. OF 8" ABOVE THE OVERBURDEN
- 4) MIN. OF 2' OF BALLAST BETWEEN WALL FLASHING AND VEGETATIVE ROOF

GREEN ROOF	WALL FLASHING
GREEN ROOF ASSEMBLY 1.4	
DRAWN BY:	1/2015
APPLICABLE TO ALL FLEX	
ADHERED ROOFING SYSTEMS	
FLEX MEMBRANE INTERNATIONAL	5103A Pottsville Pike, Reading, PA 19605 800–969–0108 FlexRoofingSystems.com