


INSTALLATION

- 1 - INSTALL SPRING CLIP OVER FB FIELD MEMBRANE
- 2 - LAY ROOFING MEMBRANE OVER CLIP AND HOT AIR WELD TO FLEX FIELD SHEET
- 3 - SNAP ON EXTERIOR METAL FASCIA

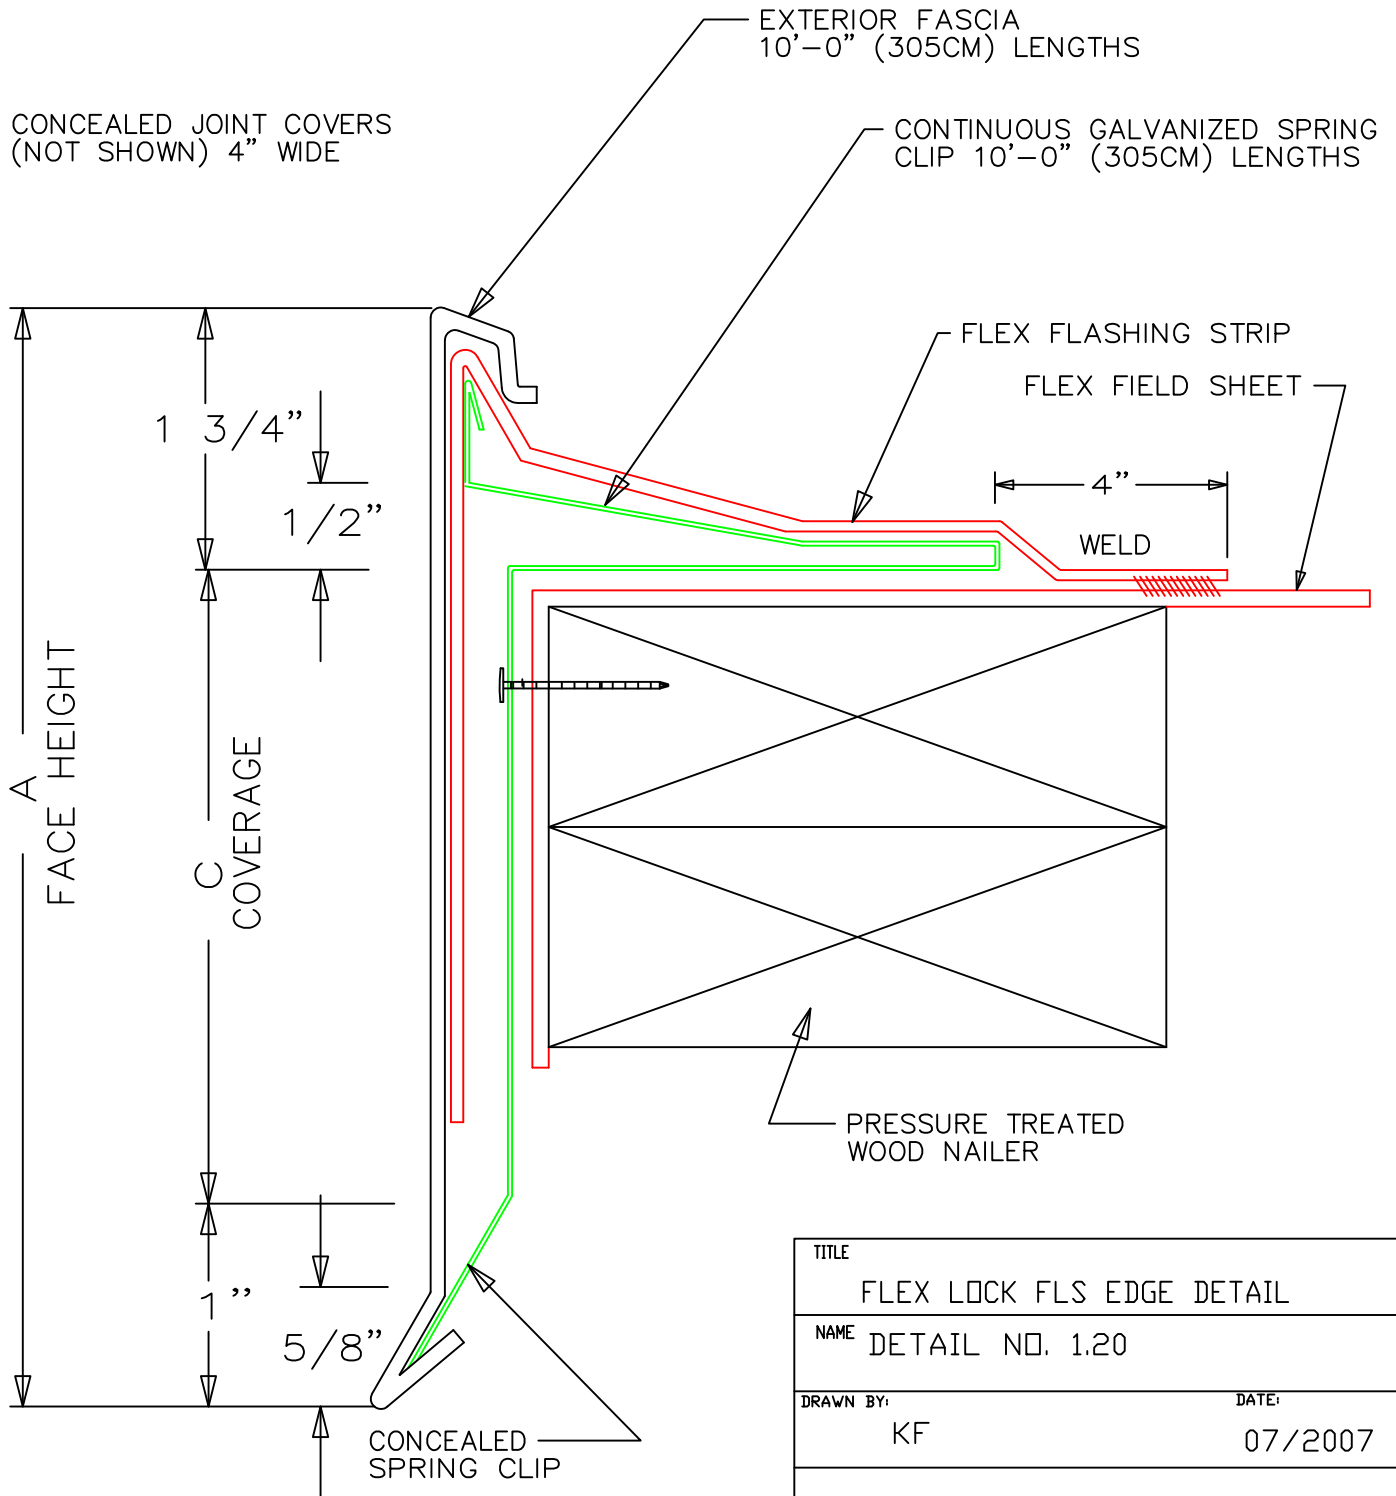

TITLE	
FLEX LOCK FLS EDGE DETAIL	
NAME	
DETAIL NO. 120	
DRAWN BY:	DATE:
KF	07/2007
APPLICABLE TO FLEX ADHERED	
SYSTEMS	
FLEX MEMBRANE INTERNATIONAL	2670 LEISCZ'S BRIDGE RD. LEESPORT, PA 19533 800-969-0108 www.flexmembranes.com