


APPLY HEAT TO FLASHING
AND FORM BY HAND PRIOR
TO HOT AIR WELDING

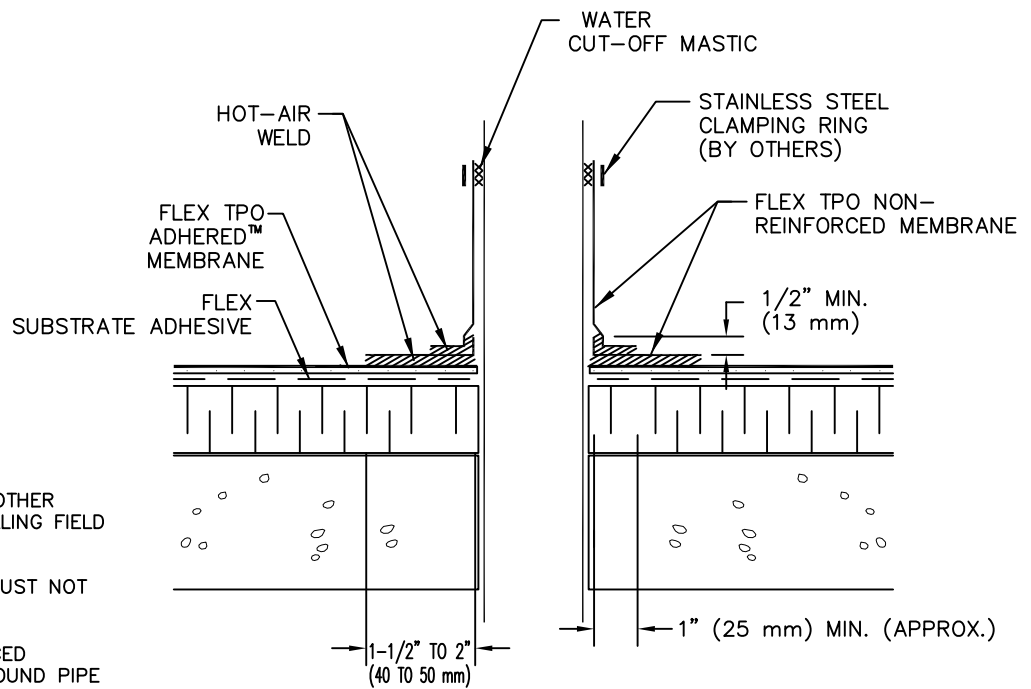

NOTES:

1. REMOVE ALL LEAD AND OTHER FLASHING BEFORE INSTALLING FIELD FABRICATED PIPE SEAL.
2. TEMPERATURE OF PIPE MUST NOT EXCEED 120° F (49° C).
3. FLEX TPO NON-REINFORCED MEMBRANE WRAPPED AROUND PIPE SHALL HAVE MINIMUM 1-1/2" (40 mm) VERTICAL HOT AIR WELD.

TPO 4.04
FIELD FABRICATED PIPE FLASHING