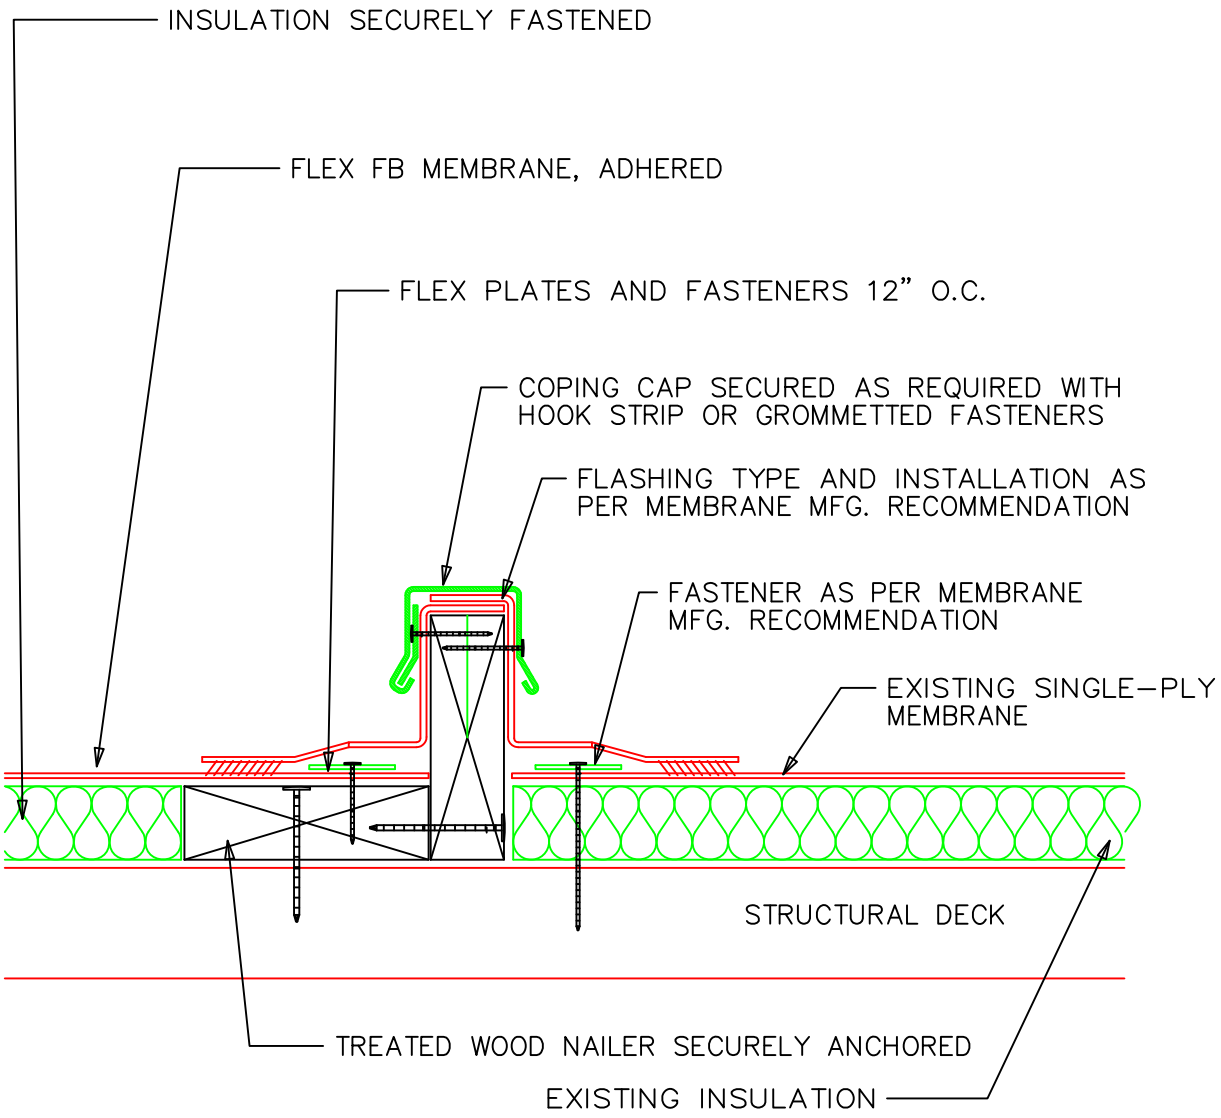

NOTES:
1) NAILERS SHALL BE SECURELY ANCHORED TO THE DECK TO RESIST A FORCE OF 100 POUNDS PER LINEAL FOOT IN ANY DIRECTION.
2) FOLLOW EXISTING SINGLE-PLY MFG. RECOMMENTIONS FOR TIE-IN DETAIL AND RECOMMENDATION FOR CLEANING MEMBRANE.
3) CLEAN EXISTING SINGLE-PLY MEMBRANE PRIOR TO HOT-AIR WELDING.

TITLE TIE IN TO EXISTING SINGLE PLY	
NAME DETAIL NO. 3.91	
DRAWN BY: KF	DATE: 07/2007
APPLICABLE TO FLEX	
ADHERED SYSTEMS	
FLEX MEMBRANE INTERNATIONAL	2670 LEISCZ'S BRIDGE RD. LEESPORT, PA 19533 800-969-0108 www.flexmembranes.com